


A18 instruction manual

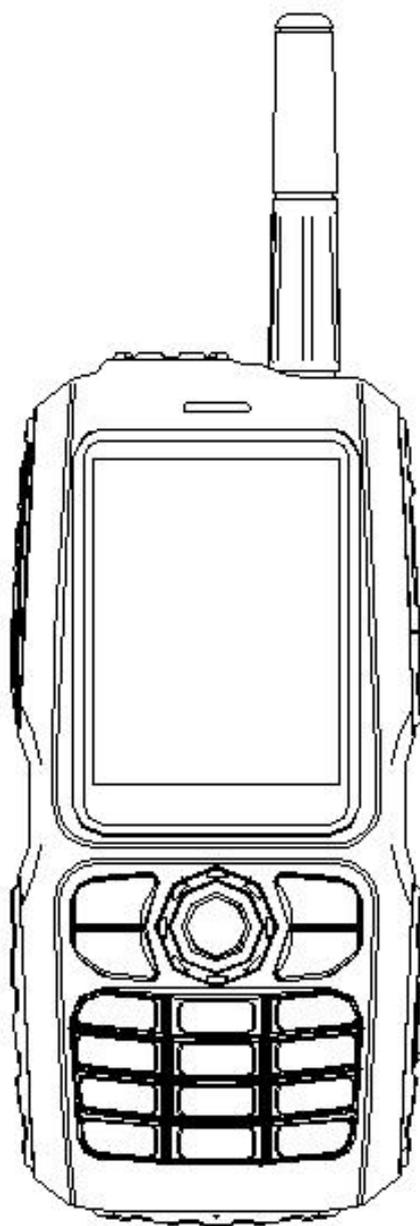

Instructions before use:

Don't use hand held phones when driving. When using the telephone unavoidably while driving, please use hands-free accessories.

In some countries, it is illegal to dial or answer the phone while driving!

Wireless devices can cause interference on aircraft. Using mobile phones in flight is illegal and risky. Make sure your cell phone shuts down during flight and shuts down before entering dangerous areas.

Strictly abide by the laws, regulations and regulations concerning the use of mobile phones in dangerous areas. Turn off your cell phone before entering places susceptible to explosion, such as oil stations, tanks, chemical plants or places where the blasting process is under way.

Keep all special rules

Obey any special regulations implemented in hospitals and other places, prohibit the use of mobile phones or cause interference or danger, should turn off the mobile phone. Appropriate use of mobile phones near medical devices, such as pacemakers, hearing aids and other electronic medical devices, may interfere with these devices.

interfere

The quality of any mobile phone conversation may be affected by radio interference. The antenna is built into the inside of the phone and is located below the microphone. Do not touch the antenna area during the conversation, so as not to deteriorate the quality of the conversation.

Qualified service

Only qualified personnel can install or repair telephone equipment. Installing or repairing mobile phones by oneself may bring great danger and violate the warranty regulations.

And battery pack

Use only approved accessories and batteries.

Fair use: Use only in a normal and appropriate manner.

Emergency call

Ensure that the phone is connected and in use, enter an emergency number, such as 112, and then press the dial key. Give your location and give a brief description of your situation. Don't end the call until you do so.

Note:

Like all other mobile phones, due to network or wireless transmission problems, the mobile phone does not necessarily support all the functions described in this manual.

Some networks do not even support emergency call services. Therefore, do not rely solely on mobile phones for emergency communications, such as first aid. Please consult your local network operator.

Matters needing attention

Keep the phone dry. Keep away from rain, moisture, liquids or other substances that may corrode electronic circuits.

Do not use or store mobile phones in dusty places in order to avoid damaging the effective parts of mobile phones.

Do not store mobile phones in hot places. High temperatures shorten the life of

electronic circuits and damage batteries and some plastic parts.

Don't store your cell phone in a cold place. Otherwise, when the mobile phone moves to a constant temperature position, water will form inside the mobile phone to damage the electronic circuit.

Enclosure

Do not throw, knock or shake the phone, because it will damage the internal circuit and high-precision components of the phone.

Brief introduce of keypads

Power button

The power button is on the right side of the phone. When using the phone, you can press this key to lock the screen; if you press and hold this key, a call options dialog box pops up. Here, you can choose to adjust the configuration file power off or on.

Return key

Over the power key, press and return to the upper interface.

Flashlight key

On the right side of the phone, press and turn on the flashlight when it is on.

Dial key

The dial button is on the left side of the front of the phone, and the button pops up the interface of the dial-up digital key.

Talkback key

The interphone button is the special interphone button in the upper left of the mobile phone. When the mobile phone opens the interphone function, pressing the PTT button can start to speak, and lifting up can receive other group members to speak.

Volume key

The volume button is above the PTT button of the mobile phone. In the call interface and music playing interface, you can adjust the volume of the receiver and speaker by pressing it.

Charging hole

The charging hole is on the right side of the mobile phone. Open the rubber plug and use the 5pin interface data line to connect charger charging and data transmission of equipment such as computer.

Installation of SIM card and battery

SIM cards carry useful information, including your mobile phone number, PIN (personal identification number), PIN2 PUK (PIN unlock key), PUK2 (PIN2 unlock key), IMSI (International Mobile User ID), network information, contact data and message data.

Note:

After switching off the phone power, wait a few seconds before removing or inserting the SIM card.

Be careful when operating SIM cards, because friction or bending can damage SIM cards.

Put mobile phones and their accessories (such as SIM cards) within children's reach properly.

install

The SIM card is inserted into the SIM card slot gently. The corner of the card is cut to align with the slot incision. The gold plate of the card is downloaded until the SIM card can not be pushed further.

When the battery is installed, we can see the direction of the battery contacts, and

when the battery contacts are installed, we can see the direction of the battery contacts in the next front direction.

Install the battery cover. Notice that the three protrusions of the battery cover are inserted into the groove under the bottom of the chassis to buckle the battery cover and tighten the screw of the battery cover.

Note:

SD card is a miniature object. Put it out of the reach of the child so that the child won't swallow it!

3.2 rechargeable battery

Your cell phone can monitor and display battery power.

Usually the remaining battery energy is indicated by the battery level icon in the upper right corner of the display screen.

When the battery energy is insufficient, the cell phone prompts "low battery". Use travel adapters;

Install the battery on the mobile phone before charging.

Connect the adapter of the travel charger to the charging tank in the mobile phone.

Ensure that the adapter is fully plugged in.

Insert the travel charger plug into the appropriate power outlet.

During charging, the battery level grid in the battery icon flickers until the battery is fully charged.

When the charging process is over, the battery icon no longer flickers.

Note:

Make sure the charger plug, headphone plug and USB cable plug are inserted in the right direction. Inserting them in the wrong direction can lead to charging failure or

other problems.

Before charging, ensure that the standard voltage and frequency of the local power supply match the rated voltage and power of the driving charger.

In the free screen, select the menu/multimedia/camera to enter the preview screen.

Photograph

Press the Photo Key to capture, and you can do other things through the Options menu.

Video player

With videos, you can play video clips (for example, videos captured by a camera) on the device or store video files (if inserted) in compatible SD cards.

Audio player

You can listen to music through this function. In the playback interface, music playing/pausing and stopping can be controlled by the middle key, songs can be switched to the playlist by the left and right keys, and the volume can be adjusted by the up and down keys.

news

You can exchange short messages and multimedia information with your friends through short messages on your mobile phone.

In the free screen, select menu / message / write message.

Enter information and choose to send.

Edit recipients.

Press Send to send a message.

file management

This kind of mobile phone can be quickly accessed and used for various media

resources. Standby mode, select menu / file management / mobile phone to enter the file management interface, its main functions support the following functions.

Establish a default folder structure tree, which is related to the default storage location of other applications (such as audio, my music, photos, videos, etc.).

Support the creation of new folders;

Support necessary file operation, copy, delete, rename;

Support the operation of T-flash, format, edit, etc. After formatting, a file named "My." will be generated to store music and "Videos" to store video.

Supports preview and editing of images.

Bluetooth

The phone supports Bluetooth data transmission and sets the function of turning on or off Bluetooth.

Visibility: Choose "on" or "off", and if you turn off this feature, you can't search other Bluetooth devices externally.

My device: Show a list of Bluetooth devices. If the list is empty, select "Search for New Devices".

My name: Edit Bluetooth device name.

WIFI

WIFI opens in the settings to find the wireless network you need. Enter the password to connect to the wireless network.

GPS

GPS is a positioning system provided by mobile phone hardware, which can be turned on in the settings. When other applications need to use positioning services in mobile phones, this function should be turned on.

Function menu

In this menu, the phone provides you with the following functions: calendar, calculator, unit conversion, timer, stopwatch, memo, and all previews.

Set up

In the settings, it provides WIFI Bluetooth GPS SIM card network service display prompt sound application security account language input method and other more functional options.

notes

If you need to find functions and information in your phone, you can search in the search bar above after entering the Start Menu.

Welcome to use our products. We reserve the right of final explanation for the inconsistencies between the instructions and the functions and parameters of our products due to the hardware upgrade and system upgrade.

Touble shooting

Charger not work	Please use original cable as its special
------------------	--