


SPEAKER MICROPHONE

Quick operation manual

NO.	Function	NO.	Function
1	Volume knob	9	brightness control-
2	Glasses cover	10	brightness control +
3	red lantern	11	PTT key
4	blue light	12	Light switch / lock key
5	White lamp	13	Back clip screw hole
6	Microphone	14	USB
7	Indicator light	15	loudspeaker
8	power switch	16	connecting line

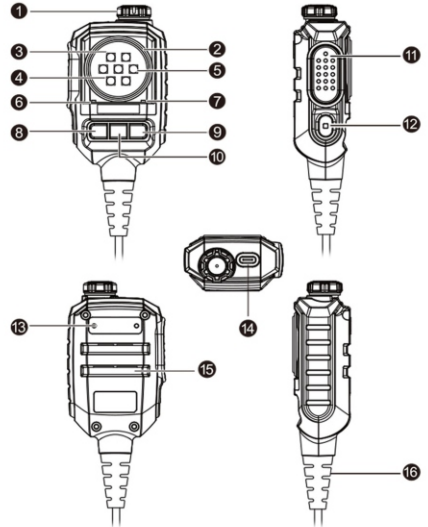

Preparation Before Use

Install the back clip

If you need to install the back clip, you can remove the built-in clip on the back of the body. Insert the two screws through the back clip screw hole to secure the back Clamp fixed on the back of the body. of the fuselage.

Charging

please charge the Mic with the **5V / 1A** power adapter by using the Type-C charging cable.

NOTICE: If the device is not used for a long time, please charge the device regularly, otherwise, the performance of the device may be affected.

Turn on / off

*Long press [power button] for 3 seconds to Power ON/OFF.

When the battery voltage is too low, the Mic will "dididi" but not power on.

The LED light

1. In the standby mode, short press [light switch] to turn on the white light and adjust the brightness by +-key.
2. Press [light switch] again to switch the red and blue warning light, and press the third time to turn off light.
3. When the red and blue warning light is flashing, long press the [light switch] key to open the alarm sound and screw the [Volume knob] Adjust the alarm sound volume.

PTT key

Press and hold the [PTT key] to transmit, release the PTT key to listen. **(No matter Mic is power on or off, PTT work)**

Volume set

In the mic is power on mode, you can use the [volume knob] to adjust the volume. if the mic is shutdown, the [volume knob] cannot control the intercom volume.