

User Manual

Thank you for choosing our 4G PTT Phone.

Please read this manual carefully before using the product and keep it properly.

Safety and Warning

Attention! It is important to recognize and understand the general risks in use of this product.


- This product must be repaired only by professionals. Without prior authorization this product shall not be dismantled.
- Do not use this product or recharge its battery in environment exposed to any explosive material (e.g. gas, dust or vapor).
- Shut this product down while fueling or at gas station.
- Do not change or alter this product for any reason.
- Do not expose this product to direct sun for a long time nor place it near any heat source.
- Do not place this product in location exposed to excessive dust, humidity or splash of water, nor on any unstable surface.

Products Overview




Unpacking and check

Package Contents:

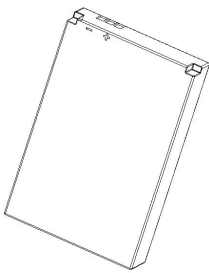

Battery Pack

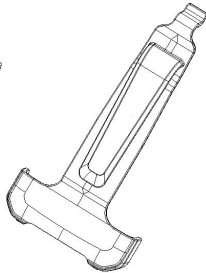

Back Clip



USB Charger



USB Cable



User Manual

Function Overview

● Initial Startup

Ensure that the battery has been mounted properly.

Startup: press and hold the power key till a startup picture appears on the screen. Some SIM cards are furnished with protection with PIN code. Where it is required, enter your PIN code. The initial PIN code is usually "1234".

● Screen Unlocking

Short press power key to lock the screen, and press it again to unlock the screen; slide unlock icon up to unlock the screen and make it standby.

● System Message Bar

To display system message bar: hold the status bar at the top of screen with a finger, and touch and drag the drop-down box down. The system message bar displays applications currently operating. You can have quick access to any application by clicking on it from the operation list. Tips: No call is available when flight mode is activated. The system message bar also displays any notice (short message received or call missed) in addition to applications currently operating.

● Custom Settings

Long press a blank position on main screen to access custom setting page, where you can set wallpaper, add gadget or have access to system settings.

● Move or delete icon

Long press the menu or gadget icon on screen to move or delete related icon.

● **Recover to factory settings**

Choose "Backup & Reset" from the menu to recover the system to factory settings.

Warning: Recovering the system to factory settings will reset this product to initial status and clear any system data and settings, including applications downloaded and application data.

Function Overview

● **POC Software System**

The POC trunking dispatching system is a software system integrating individual voice call, group call and short message services. Android-based app is a client-side application installed in Android-base system, which will be used for sign-up with server, individual voice call, group call and short message service, video uploading/playback/call.

PTT Key

PTT (Press to Talk) key is used to toggle between voice transmission and reception.

● **Photo Gallery**

Browse any pictures, photos and video files stored in this product, and make quick shots by click on Shoot icon.

● **File Management**

View and manage any files stored in internal or external storage in this product.

● **Camera**

User can take photos and record video clips, and have access to settings such as exposure, color effects, framing modes, face recognition and continuous capture based on your preference or environment conditions to obtain optimum picture effect; and view any photo taken or video recorded.

● **Message**

Click on it to access a list of messages received, and then edit, send or delete any of them.

● Dialing

Use a menu at the bottom of the screen to quickly access call history, digital dial scale and call settings.

● Contact List

You can use it to make calls, send e-mails or short message to your friends and workmates. You can add new contact to the list, or synchronize it to the data in your PC-based application.

◦

● Calendar

It is used to access your matters and events on calendar, or view date or dates on it by day, week or month, which will be displayed on a weekly or monthly basis to facilitate your access to your appointment and addition of new matter.

● Setting

Enter the menu to make custom settings to this product, including wireless network, scenario mode, display, storage, battery, application, position information, security, language and input method, backup & reset, account management, date and time, supplement function, printing and system information.

Instructions for Use of Battery

- Do not throw the battery into fire.
- Do not keep the battery near or in any heater, microwave oven, kitchen article in high temperature, or HP container, or otherwise the battery may leak or even explode.
- Do not refrigerate the battery, or otherwise it may deform, or result in short circuiting due to condensation.
- Avoid the battery from contact with any metal object, or otherwise it may be in short circuit or damaged permanently.
- Do not keep this product near magnetic field, or otherwise it may discharge.
- Keep the battery in well-ventilated environment, and do not cover it with quilt or clothing.
- Do not use a damaged or leaked battery; for disposal of it, contact your local authorized service center.
- Dispose the battery in compliance with local laws and regulations.

- Do not keep this product or battery in environment at extremely high temperature, such as car in summer, or otherwise the equipment screen may fail or the battery may explode.
- Do not expose this product or battery to direct sun for a long time, such as dashboard in a car.
- Store the battery at a ambient temperature between 0 °C ~ 45 °C.
- Biting or sucking the battery may damage it or even cause explosion or fire.
- Child or animal may stifle by swallowing small-size part.
- Do not impose pressure on the battery.
- Do not use this product without the battery mounted properly, or the battery may fall down and thereby cause damage or malfunction.
- Shut this product down before removing the battery. Removal of battery with this product started may cause failure in the product.
- In case of damage in the battery, such as deformation, immediately stop using it and replace it. Use of a damaged battery may cause overheating, fire or even explosion, and thereby personal injury.

In case of smell, smoke or leakage from or noise in this product or battery, immediately stop using it and contact our after-market service for repair, or otherwise it may cause fire or explosion.